

13. Disposal and environment protection

Your device should be disposed free of charge at the local disposal points.

14. Technical specifications

Device	
Power supply	AC 220 - 230 V / 50 Hz
Weight	approx. 2,5 kg
Vertical pivoting radius	180 °
Dimensions incl. softbox (HxWxD)	approx. 60 cm x 60 cm x 63 cm
Accessories	Lamps, front diffusor, rear diffusor, light tent cloth

Lamps	
Spiral Daylight (energy-saving lamp), which comply to EN 60357 Page 3155	3 x 28 W
Colour temperature	5200 - 5500 K
Socket	E27
Permitted operation temperature	-10 °C to + 40 °C

Storage conditions Dry and dust-free in carton at -20 °C to +50 °C

walimex

Copy of Instruction Manual



3in1 Daylight with Softbox + Light Tent

FOTO WALSER
SPEZIALVERSAND

Gewerbering 26
86666 Burgheim
Tel. +49 84 32 / 9489-0
Fax. +49 84 32 / 9489 - 8333
eMail: info@foto-walser.de
www.foto-walser.de

Content

1.	How to understand the instruction manual.....	4
1.1	Markings on the device	4
1.2	Markings in the manual	4
2.	Important safety notes.....	5
3.	Unpack and check the device	8
4.	Overview about the parts	9
5.	Quick start guide	10
6.	Preparation for operation	10
6.1	Mount the device on tripod (optional).....	10
6.2	Mount softbox and accessories	11
6.3	Screw in and out of lamps	11
6.4	Connect to power supply.....	12
7.	Operation of the device	12
7.1	Adjust tilt angle.....	12
7.2	Switch device and lamps on and off.....	12
8.	Transportation and storage.....	13
9.	Solve problems	13
10.	Maintenance	14
10.1	Continuous inspections	14
10.2	Cleaning	14
10.3	Change lamps	15
11.	Accessories and options	15
12.	Spare parts.....	15
13.	Disposal and environment protection	16
14.	Technical specifications.....	16

3in1 Daylight with Softbox and Light Tent	Cleaning
Housing	Use a microfiber cloth to remove light and stubborn dirt
Lamps	Wipe off with dust brush or dry, soft cloth <i>ADVICE:</i> <i>Don't clean the lamps with water. Even small residues on the lamps could lead to bursting</i>
Softbox	Use a microfiber cloth to remove light and stubborn dirt

10.3 Change lamps

WARNING

Please just use lamps, which are conform with the required specifications.

See *Technical Specifications*.

1. Screw lamps out and in.
*See *Screw in and out of lamps*.*

11. Accessories and options

You can find extensive accessories for your device in our webshop.

12. Spare parts

Part of the device	Item number
Lamp (walimex Spiral Daylight Lamp 28 W)	15335

10. Maintenance

10.1 Continuous inspections

What you should do?	Before every operation	With every change
Check all cables and plugs for damages In case of damage: ⚠ WARNING! Danger of electric shock and fire through short-circuit. The device should be repaired by an electrician immediately	X	
Check, if the lamps are screwed in firmly In case of damage: ⚠ WARNING! Danger of electric shock and fire through short-circuit. The device should be repaired by an electrician immediately		X
Check, if the Softbox is mounted correctly	X	

10.2 Cleaning

⚠ WARNING

Danger of cutting and splitting through breaking or bursting lamps

Don't let the lamps fall down.

Don't touch the lamp with bare hands. Just touch the lamp at the plastic socket or wear clean cotton gloves or use a clean cloth.

⚠ WARNING

Danger of electric shock

- The contact with moisture or water should be avoided.
- Unplug the power cord before cleaning the device.

ADVICE: Just use the following specified cleaning supplies.

Thank you very much for your confidence. We wish you much pleasure and success with your new device.

The walimex 3in1 Daylight with Softbox + Light Tent is a powerful, energy-saving continuous light, which is especially developed for ambitious beginners and professional users in film and studio photography.

The main features of your device as follows:

- stable light with constant colour temperature
- tiltable and rotatable socket, which fits on every common lamp tripod
- very lightweight
- Softbox and Light Tent approx. 60 x 60 cm
- reduced heat development through cold light source



- **Please read these instructions carefully before using your device for the first time. It includes everything you need to know to avoid physical injuries and damages.**
- **Please pay attention to all safety notes in this instruction manual.**
- **Please keep this manual safe. In case of selling or leaving the device to other persons, please don't forget to hand this manual over as well.**

1. How to understand the instruction manual

1.1 Markings on the device



This marking mean, that your device meets the safety requirements of all relevant European Directives.



This marking mean, that your device should be disposed in the local disposal points.

1.2 Markings in the manual

Marking	Meaning
	Indicates the handling and consequences of safety notes.
WARNING	Indicates a hazardous situation, which, if not avoided, could result in a serious injury or death .
CAUTION	Indicates a hazardous situation, which, if not avoided, may result in minor or moderate injury.
<i>ADVICE:</i>	Indicates potentially physical damages and other important information in connection with your device.

8. Transportation and storage

- Switch off device.
See Switch device on and off.
- Let the device cool down completely.
⚠ WARNING! Danger of burning through hot parts. Let the device cool down completely.
- Screw out lamps and store them securely.
See Screw in and out of lamps.
- Demount power cord.
- Clean the device if necessary.
See Cleaning.
- Demount softbox.
- Put the device and all demounted elements in one carton and carry and store them according to your requirements in the technical specifications. *See Technical specifications.*

9. Solve problems

Problem	Possible reason	Remedy
Device is switched on, but has no function	Power cord is not plugged or plugged incorrect	Plug in the power cord correctly
Lamps do not light up	Lamps are switched off	Switch on lamps, see <i>Screw in and out of lamp</i>
	Lamps are not screwed in firmly	Screw the lamp more firmly into the socket
	Lamp is defect	Change lamps, see <i>Screw in and out of lamps</i>

10. Screw in lamps:
Screw in lamps carefully.
⚠ WARNING! Danger of electric shock. Always screw in all three lamps as to avoid touching in the sockets, when the device is switched on.

11. Screw out lamps:
Screw out lamps carefully and store them securely.

6.4 Connect to power supply

1. Switch off device.
See *Switch device on and off*.
2. Compare the local power supply with the connected load of the device.
See *Technical specifications*.
If the values differ, please contact info@foto-walser.de or tel. 49 84 32 / 9489-0.
3. Connect the power cord with the socket on the device and with the power socket.

7. Operation of the device

7.1 Adjust tilt angle

1. Open tilt lever.
2. Adjust the required tilt angle.
3. Tighten tilt lever.

7.2 Switch the device and lamps on and off

The lamps can be switched on and off through the On/Off tappet switch.

1. Switch the device and lamps on:
Set On/Off tappet switch on I.
The lamps light up.
2. Switch the device and lamps off:
Set On/Off tappet switch on O.
The lamps go out.

2. Important safety notes

⚠ WARNING

Risk of eye injury

The optical radiation of the lamps could blind your eyes and lead to afterimages, if persons and animals look into the lamp directly. This could lead to injuries. Please avoid persons and animals looking into the flash directly.

⚠ WARNING

Danger of crashing, entrapment and fire through the falling down of the device

The weight of the device is approx. 2,5 kg.

- **Make sure, that the device is always positioned tilt and skid resistant and stored securely.**
- **Keep out of reach of children and animal. They could overturn the device.**
- **Avoid placing cables where they can be tripped over. The device could be overturned.**

⚠ WARNING

Danger of electric shock, burn hazard

Please note, that the device is still connected with the supply voltage even if it is switched off. Just after disconnecting the device from the power supply through pulling out the power cable, the device is actually de-energized.

- **Switch off your device when it is not in use.**
- **Switch off your device before mounting and maintenance and disconnect from power supply.**
- **Protect your device against unintended switching-on.**
- **Unplug the power cord, if the flash is not in use for a long time.**

⚠ WARNING

Danger of electric shock, fire through short-circuit

A short-circuit could be caused through defect cables and through

humidity or moisture. A short-circuit can warm up the conductors, so that there isolation may melt or even melt thoroughly. This could lead to fire.

- Please just use the original cables, which are included in delivery. They are aligned for your device and guarantee the necessary safety for you and your device.
- Don't operate the device with wet hand or feet.
- Operate the device only in dry rooms.
- Don't operate the device outdoors.
- Please only follow this instruction manual for cleaning the device.
- Make sure, that cables and conductors won't be damaged. Damages could be caused through heat impact, chemical influence or through mechanical impacts as rubbing, bending, tearing, rolling over or nibbling animals.
- Prevent your device for falling-off. In case of falling-off, please let an electrician check the device before switching on again.
- If your device should be damaged or defect or if you notice a burning smell:
Disconnect the power supply by pulling out the power cord immediately. Never operate your device with damaged housing, damaged reflector, defect lamps or damaged power cord. Don't open the device. Never repair the device on your own. The device should only be repaired by electricians.
- Please follow this instruction manual for maintaining your device.
- Please just use spare parts, which are conform to the required specifications.
See *Technical Specifications*.

⚠ WARNING

Fire danger through overheating

The device can overheat, if you operate it with covered ventilation slots. The accessories can overheat, if it does not comply with the necessary specifications.

6.2 Mount softbox and accessories

1. Put the softbox cover over the Daylight.
2. Insert the rods in the provided holes at the openings on the lamp ring.
3. Insert the rods in the lugs at the edges of the softbox. The black lug can be opened for easier mounting and tightened firmly with the Velcro fastener at the end. The softbox cover can be tightened through the lugs on the device.
4. After mounting the lamps, see *Screw in and out of lamps*, you can attach the front diffuser on the softbox.
5. Put the front diffuser on the softbox.
6. You have to demount the front and rear diffuser for using the light tent. Put the softbox with the front side on the ground. The softbox can be opened on one side. You can attach the required light tent cloth on the inside of the softbox.



6.3 Screw in and out of lamps

⚠ WARNING

Danger of cutting and splitting through breaking or bursting lamp
Don't let the lamp fall down.
Don't touch the lamps with bare hands. Just touch the lamp at the plastic socket or wear clean cotton gloves or use a clean cloth.

ADVICE:

Possible discolouration through burn marks on the lamps.

7. Switch off device.
See *Switch device on and off*.
8. Disconnect from power supply:
Plug out power cord.
9. Let the device cool down.
⚠ CAUTION! Danger of burning on the lamps. Let the device cool down for approx. 15 minutes.

5. Quick start guide

ADVICE:

The detailed instruction for the following operations can be found in the respective chapters in this instruction manual.

Keep the sequences of the following operation steps when using the device for the first time to avoid damages on the device.

⚠ WARNING

Please note the safety notes in the respective chapters throughout operation.

- Mount the device on a tripod (optional).
- Mount softbox and accessories.
- Screw in lamps.
- Adjust tilt angle.
- Connect to power supply.
- Switch device and lamps on/off.

6. Preparation for operation

6.1 Mount the device on a tripod (optional)

ADVICE:

Please note the user information of the tripod manufacturer.

⚠ WARNING

Select a tripod of suitable weight and dimensions. See *Technical Specifications*.

Make sure, that the tripod with the mounted device has a tilt and skid resistant stand.

1. Loose locking knurl.
2. Mount the device on the tripod.
3. Tighten locking knurl.

The device itself, accessories and easily inflammable materials in close distance could catch fire.

- Please just use accessories and spare parts, which are conform to the required specifications. See *Technical Specifications*.
- Lamps, which are damaged or deformed through heat, should be exchanged immediately.
- Remove easily inflammable materials, which are in close distance to the device.

⚠ CAUTION

Danger of burning on hot parts

The lamps could heat up up to 70°C.

- Don't touch the parts during operation and cooling down.
- Please cool down your device completely before starting any mounting or maintenance arrangements.

⚠ WARNING

Danger of cutting and splitting through breaking lamps, possible discolouration on the lamps

Lamps can break and split, when they fall down.

Even small residues of skin oil on the lamps could lead, due to the high heat impact, to the splitting of the lamp. Broken glass could hurt eyes and skin.

- Please handle the lamps with care to avoid bursting.
- Don't touch the lamps with bare hands. Just touch the lamp at the plastic socket or wear clean cotton gloves or use a clean cloth.
- Avoid touching the flash tube accidentally when mounting or changing accessories.
- Please just use lamps, which comply to EN 60357 Page 3155.

3. Unpack and check the device

1. Please unpack the device carefully.
2. Please check, if the delivery is complete:
 - 1 Daylight
 - 1 Softbox Cover
 - 4 Rods
 - 3 Lamps
 - 1 Front Diffusor
 - 1 Rear Diffusor
 - 3 Coloured Light Tent Cloths each approx. 90 x 40 cm
 - 1 Instruction Manual in German and English.
3. Please check, if the delivery is undamaged.
ADVICE: If the delivery should be incomplete or damaged, please contact info@foto-walser.de or our service hotline with the telephone number +49 84 32 / 9489-0.

4. Overview about the parts

