

walimex

Copy of Instruction Manual



Flash Trigger Set for Compact Flashes

FOTO WALSER
SPEZIALVERSAND

Gewerbering 26
86666 Burgheim
Tel. +49 84 32 / 9489-0
Fax. +49 84 32 / 9489 - 8333
eMail: info@foto-walser.de
www.foto-walser.de

Content

1.	How to understand this instruction manual	4
1.1	Markings on the device	4
1.2	Markings in this manual	4
2.	Important safety notes	5
3.	Unpack and check the device	5
4.	Overview about the parts	7
5.	Quick-start guide	7
6.	Preparation for operation	7
6.1	Mount on e.g. tripod and compact flash	7
6.2	Adjust frequency.....	8
6.3	Mount the transmitter on the camera	8
7.	Operation of the device	8
7.1	Trigger the test button	8
8.	Solve problems	9
9.	Maintenance	9
9.1	Continuous inspections	9
9.2	Cleaning	9
9.3	Change battery	10
10.	Accessories and options	11
11.	Disposal and environment protection	11
12.	Technical specifications	11

10. Accessories and options

You can find extensive accessories for your device in our webshop.

11. Disposal and environment protection

Your device should be disposed free of charge at the local disposal points.

12. Technical specifications

Receiver

Battery	CR2 3V
Weight	approx. 45g
Dimensions (H x W x L)	approx. 2 x 6,5 x 5 cm

Transmitter

Battery	23A 12V
Weight	approx. 25g
Dimensions (H x W x L)	approx. 3 x 5 x 5,5 cm
Permitted operation temperature	-10 °C to + 40 °C
Frequency	433 Mhz
Storage conditions	Dry and dust-free in carton at -20 °C to +50 °C

9.3 Change battery

⚠ WARNING

Please just use batteries, which comply with the required specifications.

See *Technical Specifications*.

Transmitter:

1. Use a Phillips screwdriver to loose the screw on the bottom side of the transmitter.
2. Take off the top side of the housing.
3. Change the battery. Pay attention to the right polarity.
4. Screw up the housing again.



Screw for opening the housing

Receiver:

5. Open the battery compartment on the bottom side.
6. Insert the batteries into the battery compartment.
7. Close the battery compartment.



Battery compartment

Thank you very much for your confidence. We wish you much pleasure and success with your new device.

The walimex Flash Trigger Set for compact flashes consists of one transmitter and one receiver. It is suitable for the following flash devices: **Canon 580EX II, Nikon SB-900, SB-800, SB-600, SB-28, SB-27, SB-26, SB-25, SB-24, Marumi DPZ420AF, D35AF, D728AF, Olympus FL-50, FL-40, FL-36, Sigma EF-500 DG Super, EF-500 DG ST, EF-430, Pentax AF-450 FGZ, AF-360FGZ, AF-400 FT, AF-240 FT, Sunpak Auto 2000DZ, 622 Pro, 433AF, 433D, 383, 355AFm, 333D.**

The main features of your device as follows:

- multifunctional: 4 channels
- easy, uncomplicated operation
- with 1/4 inch tripod connection on the receiver

⚠

- **Please read these instructions carefully before using your device for the first time. It includes everything you need to know to avoid physical injuries and damages.**
- **Please pay attention to all safety notes in this instruction manual.**
- **Please keep this manual safe. In case of selling or leaving the device to other persons, please don't forget to hand this manual over as well.**

1. How to understand this instruction manual

1.1 Markings on the device



This marking means, that your device meets the safety requirements of all relevant European Directives.



This marking means, that your device should be disposed in the local disposal points.

1.2 Markings in this manual

Marking	Meaning
---------	---------



Indicates the handling and consequences of safety notes.

ADVICE:

Indicates potentially physical damages and other important information in connection with your device.

8. Solve problems

Problem	Possible reason	Remedy
Remote Trigger has no function	Cables are not plugged in firmly	Plug in the cables firmly
	Flash Trigger is switched off	Switch on Flash Trigger
	Battery in transmitter/receiver is too weak	Change battery, see <i>Change battery</i>

9. Maintenance

9.1 Continuous inspections

What you should do?	Before every operation	With every change
Check all cables and plugs for damages In case of damage: ⚠ WARNING! Danger of electric shock and fire through short-circuit. The device should be repaired by an electrician immediately	X	

9.2 Cleaning

- **⚠** The contact with moisture or water should be avoided.

ADVICE: Please only use the following specified cleaning supplies.

Remote Trigger	Cleaning
Housing	Use a microfiber cloth to remove light and stubborn dirt

6.2 Adjust the frequency


You have the opportunity to operate the Remote Trigger with 8 different frequencies. It is important, that you make the same adjustments for transmitter and receiver as in the following example.

1. Adjust the frequency on the backside of the transmitter. Adjust the levers e.g. on O and N.



6.3 Mount the transmitter on the camera

1. Put the transmitter with the shoe on the flash socket of your camera.
2. Mount the transmitter with the fixing wheel on the shoe.
3. If your camera should not have a hot-shoe, please use the included sync cord (B) and connect the transmitter with your camera or flash shoe.

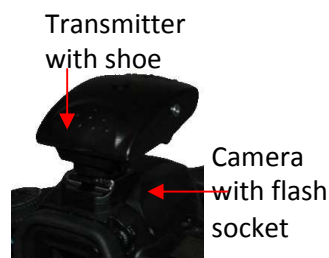

7. Operation of the device

7.1 Trigger the test button

1. Before starting your work, please check the function of your devices and trigger your studio flash through the test button on the transmitter.



2. Important safety notes



Danger of crashing through the falling down of the device and other damages.

- Don't operate the device with wet hand or feet.
- Operate the device only in dry rooms.
- Don't operate the device outdoors.
- Please only follow this instruction manual for cleaning the device.
- Make sure, that cables and conductors won't be damaged. Damages could be caused through heat impact, chemical influence or through mechanical impacts as rubbing, bending, tearing, rolling over or nibbling animals.
- Prevent your device for falling-off.
In case of falling-off, please let an electrician check the device before switching on again.
- If your device should be damaged or defect or if you notice a burning smell:
Disconnect the power supply by pulling out the power cord immediately. Never operate your device with damaged housing, defect lamps or damaged power cord. Don't open the receiver. Never repair the device on your own. The device should only be repaired by electricians.
- Please follow this instruction manual for maintaining your device.
- Disconnect from power supply by unplugging the power cord before starting any maintenance arrangements.

3. Unpack and check the device

1. Unpack the delivery carefully.
2. Please check, if the delivery is complete:
 - 1 x Flash Trigger Set for Compact Flashes
 - 1 Receiver
 - 1 Transmitter
 - 1 Sync Cord
 - 1 x Instruction Manual in German and English.
3. Please check, if the delivery is undamaged.
ADVICE: If the delivery should be incomplete or damaged, please contact info@foto-walser.de or our service hotline with the telephone number +49 84 32 / 9489-0.

4. Overview about the parts

- A Receiver
- B Sync Cord Camera/Transmitter
- D Transmitter



5. Quick-start guide

ADVICE:

*The detailed instruction for the following operations can be found in the respective chapters in this instruction manual.
Keep the sequences of the following operation steps when using the device for the first time to avoid damages on the device.*

- Mount the receiver on e.g. a tripod or compact flash.
- Adjust frequency.
- Mount the transmitter on the camera.
- Trigger the test button.

6. Preparation for operation

6.1 Mount on e.g. tripod or compact flash

1. Mount the Flash Trigger on a tripod.
2. Slide the compact flash on the socket of the Flash Trigger and fix it with the fixing wheel.
3. Adjust the tilt angle and fix it with the fixing wheel.
4. Switch on and off.

