 


# *walimex*

**Copy of Instruction Manual**

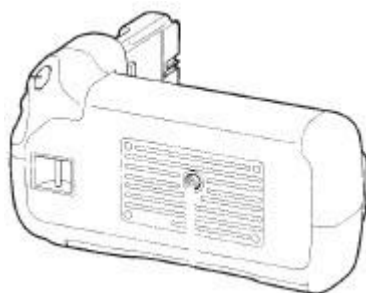

**Battery Grip for Canon 60D/450D/500D/1000D**

**FOTO WALSER**  
SPEZIALVERSAND

Gewerbering 26  
86666 Burgheim  
Tel. +49 84 32 / 9489-0  
Fax. +49 84 32 / 9489 - 8333  
eMail: [info@foto-walser.de](mailto:info@foto-walser.de)  
[www.foto-walser.de](http://www.foto-walser.de)

## Content

<b>1.</b>	<b>How to understand the instruction manual .....</b>	<b>4</b>
1.1	Markings on the device .....	4
1.2	Markings in the manual .....	4
<b>2.</b>	<b>Important safety notes .....</b>	<b>5</b>
<b>3.</b>	<b>Unpack and check the device .....</b>	<b>6</b>
<b>4.</b>	<b>Overview about the parts .....</b>	<b>6</b>
<b>5.</b>	<b>Quick-start guide.....</b>	<b>6</b>
<b>6.</b>	<b>Preparation for operation .....</b>	<b>7</b>
6.1	Remove battery cover .....	7
6.2	Connect battery grip with camera .....	7
6.3	Remove/charge/insert battery magazine.....	7
<b>7.</b>	<b>Operation of the device .....</b>	<b>8</b>
7.1	Trigger the camera .....	8
<b>8.</b>	<b>Solve problems .....</b>	<b>9</b>
<b>9.</b>	<b>Maintenance.....</b>	<b>9</b>
9.1	Continuous inspections .....	9
9.2	Cleaning .....	9
<b>10.</b>	<b>Accessories and options .....</b>	<b>10</b>
<b>11.</b>	<b>Disposal and environment protection .....</b>	<b>10</b>
<b>12.</b>	<b>Technical specifications.....</b>	<b>10</b>

Thank you very much for your confidence. We wish you much pleasure and success with your new device.

The walimex Battery Grip for your Canon EOS 60D/450D/500D/1000D is an ergonomic, powerful continuous run device.

The main features of your device as follows:

- compact – flexible – convenient
- extends the battery life of your camera without troublesome battery changing
- very handy



- **Please read these instructions carefully before using your device for the first time. It includes everything you need to know to avoid physical injuries and damages.**
- **Please pay attention to all safety notes in this instruction manual.**
- **Please keep this manual safe. In case of selling or leaving the device to other persons, please don't forget to hand this manual over as well.**

## 1. How to understand this instruction manual

### 1.1 Markings on the device



This marking mean, that your device meets the safety requirements of all relevant European Directives.



This marking mean, that your device should be disposed in the local disposal points.

### 1.2 Markings in the manual

Marking	Meaning
A black triangle with a white exclamation mark inside.	Indicates the handling and consequences of safety notes.
<i>ADVICE:</i>	Indicates potentially physical damages and other important information in connection with your device.

## 2. Important safety notes



**Risk of fracture and other damages through the falling down of the device.**

- Don't operate the device with wet hand or feet.
- Please only follow this instruction manual for cleaning the device.
- Make sure, that cables and conductors won't be damaged. Damages could be caused through heat impact, chemical influence or through mechanical impacts as rubbing, tearing, rolling over or nibbling animals.
- Prevent your device for falling-off.  
In case of falling-off, please let an electrician check the device before switching on again.
- If your device should be damaged or defect or if you notice a burning smell: Never operate your device with damaged housing, damaged reflector, defect lamps or damaged power cord. Don't open the device. Never repair the device on your own. The device should only be repaired by electricians.
- Please follow this instruction manual for maintaining your device.



 
**Disconnect from power supply by taking off the batteries before starting any maintenance arrangements.**

### 3. Unpack and check the device

1. Please unpack your device carefully.
2. Please check, if the delivery is complete:
  - 1 x Battery Grip
    - 1 Magazine for batteries or accumulators
  - 1 x Instruction Manual in German and English.
3. Please check, if the delivery is undamaged.  
*ADVICE: If the delivery should be uncomplete or damaged, please contact [info@foto-walser.de](mailto:info@foto-walser.de) or our service hotline with the telephone number +49 84 32 / 9489-0.*

### 4. Overview about the parts

- A Trigger button
- B Battery grip
- C Thread for e.g. tripod

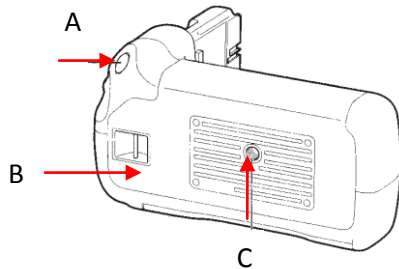

### 5. Quick-start guide

*ADVICE:*

*The detailed instruction for the following operations can be found in the respective chapters in this instruction manual.*

 
*Keep the sequences of the following operation steps when using the device for the first time to avoid damages on the device.*

- Remove battery cover from the camera (see instruction manual of your camera).
- Connect Battery Grip with camera.
- Remove/charge/insert battery magazine.

## 6. Preparation for operation

### 6.1 Remove battery compartment


1. Please consult the instruction manual of your camera.
2. Insert the battery cover into the slot on the battery grip.

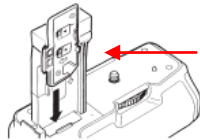

Battery Cover Camera


### 6.2 Connect Battery Grip with camera

 1. Insert the Battery Grip carefully into the battery compartment of your camera.
2. Connect the Battery Grip with the camera through the screw and the adjustment wheel.

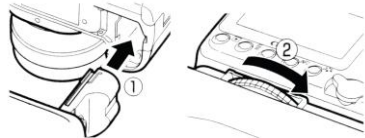


### 6.3 Remove/charge/insert battery magazine

 1. Use the lateral sliding lever to open the battery cover.


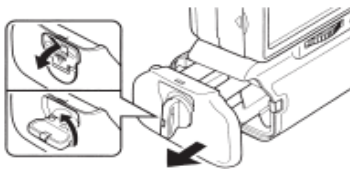


 2. When using lithium-Ion accumulators, put the accumulator into the battery magazine.

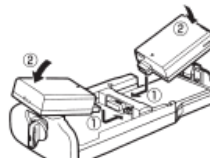


3. When using AA batteries, you have to load the battery magazine with the batteries firstly and insert them into the Battery Grip afterwards.

  *Advice:* Please pay attention to the right polarity of the batteries

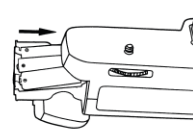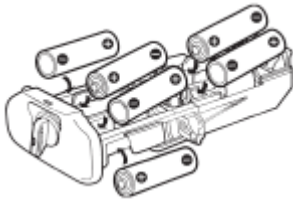

 4. Close the lateral sliding lever

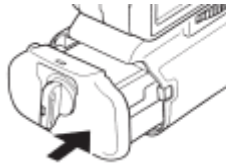


## 7. Operation of the device

On/Off button


### 7.1 Trigger the camera

 1. Press the On/Off button to switch on the Battery Grip.

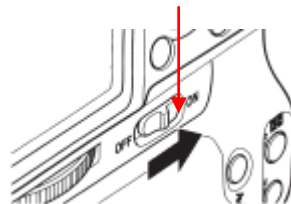

2. To trigger the camera, please press the trigger button.

 Trigger button

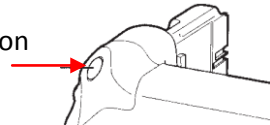




## 8. Solve problems

Problem	Possible reason	Remedy
Battery Grip has no function	Grip is not inserted correctly in the camera	Check, if the Battery Grip is plugged in correctly, if necessary, retighten with the adjustment wheel
	Battery Grip is switched off	Switch on Battery Grip
	Batteries are not inserted correctly	Pay attention to the right polarity

## 9. Maintenance

### 9.1 Continuous inspections

What you should do?	Before every operation	With every change
Check all plug connections and contacts on damages In case of damage:  The device should only be repaired by electricians.	X	

### 9.2 Cleaning

 Avoid the contact with moisture or water.

*ADVICE: Just use the following specified cleaning supplies.*

Battery Grip	Cleaning
Housing	Use a dry or slightly moist microfiber cloth to remove light and stubborn dirt

## 10. Accessories and options

You can find extensive accessories for your device in our webshop.

## 11. Disposal and environment protection

Your device should be disposed free of charge at the local disposal points.

## 12. Technical specifications

<b>Battery Grip for Canon 60D/450D/500D/1000D</b>	
Dimensions (H x W x L) <b>450D/500D/1000D</b>	approx. 10 x 12,7 x 7,8 cm
Dimensions (H x W x L) <b>60D</b>	approx. 11,2 x 14,5 x 8,5 cm
Weight	approx. 298g
Battery Magazine	for 6 x AA batteries or for 2 x accumulators LP-E5 (not included)
<b>Storage conditions</b>	Dry and dust-free in carton at 0°C to +23°C