

walimex

Copy of Instruction Manual



Camera Wireless Remote Trigger

FOTO WALSER
SPEZIALVERSAND

Gewerbering 26
86666 Burgheim
Tel. +49 84 32 / 9489-0
Fax. +49 84 32 / 9489 - 8333
E-mail: info@foto-walser.de
www.foto-walser.de

Inhalt

1.	How to understand this instruction manual	4
1.1	Symbols on the device	4
1.2	Symbols in this manual	4
2.	Important safety note	4
3.	Unpack and check devices	5
4.	Overview of device elements and operating elements	5
5.	Quick-start guide	5
6.	Prepare device for operation	6
6.1	Attach receiver to camera	6
6.2	Adjust channel	6
7.	Operation of the devices	6
7.1	Trigger test button	6
8.	Solve problems	6
9.	Maintenance of the device	7
9.1	Continuous inspection and maintenance of the device	7
9.2	Cleaning the device	7
9.3	Replacing the battery	7
10.	Accessories and options	8
11.	Disposal and environmental protection	8
12.	Technical specifications	8
13.	Compatibility	9

We would like to thank you for your confidence and wish you much joy and success with your new device.

The Wireless Remote Trigger by walimex is equipped with several features, e.g., delayed triggering, self-timer, and the option of triggering with a cable.

The main features of your set are as follows:

- intuitive and flexible usability
 - range of up to 50 meters in open room
 - handy and lightweight
 - four photograph modules selectable: single shots, series of shots, time exposure/BULB, self-timer
 - focusing by two-tiered trigger button like on camera
 - up to 16 frequencies selectable to work with several devices at the same time
-
- **Please read these instructions carefully before using your new device for the first time. It includes everything you need to know in order to avoid physical injuries and damages.**
 - **Please pay attention to all safety notes in this instruction manual.**
 - **Please keep this manual safe. In case of selling or leaving the device to another person, please ensure to hand this manual over as well.**

1. How to understand this instruction manual

1.1 Symbols on the device



This symbol means that your device meets the safety requirements of all relevant European Directives.



This symbol means that your device must be disposed of at local disposal areas.

1.2 Symbols in this manual

Symbol	Meaning
	Indicates the handling and consequences of safety notes.
<i>NOTE:</i>	Indicates potential material damage and other important information regarding your device.

2. Important safety note



Danger of breaking due to falling of the devices and other damages.

- **Do not operate the device with wet hands or feet.**
- **Only use the device in dry rooms.**
- **Do not use the device outdoors.**
- **Clean the device exclusively as described in this instruction manual.**
- **Ensure that cables and conductors are not damaged. Damage could be caused due to heat impact, chemical influence or due to mechanical impacts such as rubbing, bending, tearing, rolling over, or nibbling animals.**
- **Prevent your device from falling.**
In the case of falling, please have an electrician check the device before switching it on again.
- **If your device is damaged or if you notice a burning smell: Disconnect the power supply immediately by unplugging the power**

cord and setting the on/off switch to 0 (OFF). Never operate your device with a damaged casing, defective lamps or a damaged power cord. Do not open the device. Never repair the device on your own. Have the device repaired exclusively by an electrician.

- Please follow this instruction manual for maintaining your device.
- Cut off power supply before maintenance measures by taking out the batteries.

3. Unpack and check devices

1. Please unpack the device carefully.
2. Please check if the scope of delivery is complete:
 - 1 x Camera Wireless Remote Trigger
1x receiver, 1x transmitter
 - 1 x instruction manual in German and English.
3. Please check if the scope of delivery is undamaged.
NOTE: If the scope of delivery is incomplete or damaged, please contact info@foto-walser.de or our service hotline with the telephone number +49 84 32 / 9489 - 0.

4. Overview of device elements and operating elements

- A Receiver
- B Transmitter



5. Quick-start guide

NOTE:

The detailed instruction for the following operations can be found in the respective chapters in this instruction manual.

Maintain the order of the following operating steps when using the device for the first time to avoid damaging the device.

- Attach receiver to camera.
- Adjust channel.
- Trigger test button.

6. Prepare devices for operation

6.1 Attach receiver to camera

1. Attach the wireless receiver to the hot shoe of your camera.
2. Fasten the wireless receiver to the hot shoe using the fastening wheel.

Connect the included sync cable with the camera

6.2 Adjust channel

You have the option to use the camera wireless remote trigger with 16 different frequencies. For this, it is important to choose the same settings on the transmitter and receiver as in the following example.

Set channel on the front of the transmitter. Set the lever, e.g., to ON and/or to the numbers.



7. Operation of the devices

7.1 Trigger test button

Before starting your work, check the devices for functionality and trigger your compact flash with the test button on the transmitter.

8. Solve problems

Problem	Possible cause	Solution
Wireless remote trigger shows no	Cables are not plugged in firm enough	Plug in all cables firmly

Problem	Possible cause	Solution
function	Wireless receiver is switched off	Switch on wireless receiver
	Batteries in the transmitter/receiver are low	Replace battery, see <i>Replacing the battery</i>

9. Maintenance of the device

9.1 Continuous inspection and maintenance of the device

What you should do	Before each use	After each change
Check all cables and plugs for damages. If damaged: Have the device repaired by an electrician immediately.	X	

9.2 Cleaning of the device

⚠ Never allow for the device to get in touch with moisture or water.

NOTE: Please use exclusively the cleaning supplies specified in the following table.

Wireless Remote Trigger	Reinigung
Casing	Remove light and persistent stains with dry microfiber cloth

9.3 Replacing the battery

⚠ WARNING

Please use exclusively batteries for this device that comply with the required specifications.

See *Technical specifications*.

Transmitter:

1. Open the battery compartment lid on the back.
2. Replace the battery. Ensure correct poling.
3. Close the battery compartment lid.

Receiver:

1. Open the battery compartment lid on the bottom
2. But batteries into battery compartment.
3. Close battery compartment lid.

10. Accessories and options

You can find extensive accessories for your device in our web shop..

11. Disposal and environmental protection

Please dispose of your device at your local disposal area. This service is free of charge to you.

12. Technical specifications

Transmitter	
Dimensions (HxWxD)	approx. 8.5x3x1.5cm
Weight	approx. 20g
Batteries	12V/23A Battery
Receiver	
Dimensions (HxWxD)	approx. 9.5x3.5x2.5cm
Weight	approx. 80g

Batteries	2x AAA Batteries
walimex Camera Wireless Remote Trigger	
Channels	16
Frequency	433Mhz
Storage conditions	Dry and dust-free in carton at -20 °C to +50 °C

Reference to declaration of conformity:

„Herewith Foto Walser GmbH & Co. KG declares that the device Radio Flash Trigger Set Duo conforms to the basic requirements and the remaining corresponding regulations of the directive 1999/5/EG.“ The declaration of conformity can be requested at the following address: info@foto-walser.de.

13. Compatibility

Camera Wireless Remote Trigger Canon C1 compatible with: **Canon EOS** 30, 33, 50E, 300, 300V, 3000, 50, 300D (Digital Rebel), 350D (Digital Rebel XT), 400D (Digital Rebel XTi), 450D (Digital Rebel XSi), 500D, 1000D; **Pentax** K100D, K110D, K10D, *ist Ds2, *ist D, *ist Ds, *ist, *ist DL, *ist DL2; Samsung GX-1L, GX-1S, GX-10

Camera Wireless Remote Trigger Canon C3 compatible with: **Canon EOS** 1Ds Mark II, 1Ds Mark III, 1Ds, 1D Mark IV, 1D Mark II, 1D Mark II N, 1D Mark III, 5D Mark II, 1D, 5D, 7D, 50D, 40D, 30D, 20D, 10D, D60, D30, D2000, 1v HS, 1v, 3

Camera Wireless Remote Trigger Nikon N1 compatible with: **Nikon** D2H, D2Hs, D1x, D1h, D1, D2x, D2Xs, D200, D300, D3, D3X, D3S, D2HS, D300S,

D700, F5, F6, F100, F90, F90x; **Nikon** D100 (MB-D100 Battery Grip required);
Fujifilm Finepix S3pro, S5pro; **Kodak** DCS-14n

Camera Wireless Remote Trigger Nikon N3 compatible with: **Nikon** D90,
D5000

Camera Wireless Remote Trigger Sony S1 compatible with: **Sony Alpha**
DSRL-A100, SLR-A200, SLR-A300, SLR-A350, SLR-A700, SLR-A900, Alpha 5D,
Alpha 7D; **Minolta Maxxum/Dynax/AF** 7D, 5D, 9, 7, 5, 4, 3, 807si, 800si,
700si, 600si, 505si, 500si, Sweet, Sweets, 9000, 7000, 5000, DiIMAGE 7Hi, 7i,
7, 5