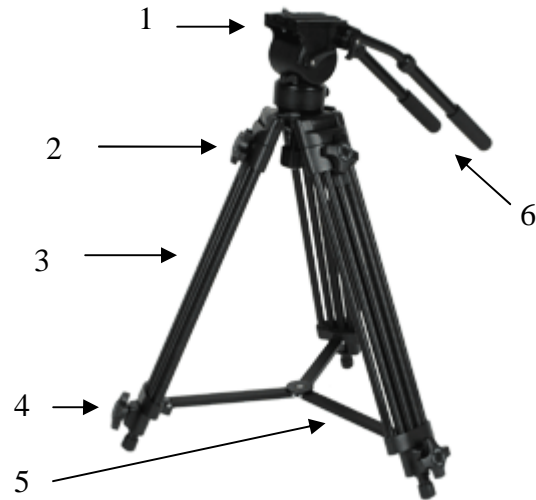


# walimex<sup>pro</sup>

## Copy of Instruction Manual Video Tripods



**FOTO WALSER**  
SPEZIALVERBAND  
Gewerbering 26  
86666 Burgheim  
Tel. +49/84 32 / 9489-0  
Fax: +49/84 32 / 9489 - 8333  
eMail: [info@foto-walser.de](mailto:info@foto-walser.de)  
[www.foto-walser.de](http://www.foto-walser.de)

- 1 Head – Screw the two handles (6) in the fixture on the head and fix them with the butterfly screws. Afterwards, you can attach the head to the opening of the tripod and tighten them from below.
- 2 Segment Screw – Upper segment, for height adjustment.
- 3 Tripod Leg
- 4 Segment Screw – Lower segment, for height adjustment.
- 5 Tripod Spider – For secure stability. Should always be used fully stretched out.
- 6 Handle for tilting and panning function.



Quick-release plate – Make sure, that the quick-release plate is mounted securely and sturdily. Before usage, check if all safety screws are tightened firmly.  
On **model FT-9902**, you can change the thread of the quick-release plate from 3/8 inch **9,525mm** to 1/4 inch **6,35mm**. For this purpose, please open the butterfly screw on the back side of the quick-release plate with a Philips screwdriver and change through the required thread.



### Only model FT-9902

Spikes for outdoor use. The tripod spider must be demounted.  
The rubber loops should be stretched over the tripod feet.



### Only model EI-737

(F) – Friction screw for switching on and off of fluid cushioning for horizontal and vertical adjustment.  
(B) – With this function, the tripod head always gets back in balance once you loose the tripod handle.

### ▲ Advice

Danger of damages through the falling down of the camera by the non-proper use of quick-release plate and mounting of the ball head on the tripod.

- Please always make sure, that the fastening screw is tightened firmly and that the safety lever of the quick-release plate is snapped into place.
- Please always make sure, that the ball head is screwed on the tripod securely and sturdily.