

walimex

Copy of Instruction Manual



Shooting Table Basic L

FOTO WALSER
SPEZIALVERSAND

Gewerbering 26

86666 Burgheim

Tel. +49 84 32 / 9489-0

Fax. +49 84 32 / 9489 - 8333

eMail: info@foto-walser.de

www.foto-walser.de


Content

0.	Introduction	3
1.	Number of units	3
2.	Assembly instruction	4
3.	Technical specifications	7

Congratulation for your new Shooting Table Basic L! This Table is ideally suitable for quick product and material photography. The sturdy frame guarantees stability even when carrying heavy items. The height of 80cm is a comfortable height for taking pictures. The diffuse surface (100x120cm incl. sweep) is ideal for taking pictures of objects without shadows.

1. Number of units

- A. 10 pieces
- B. 8 pieces
- C. 6 pieces
- D. 3 pieces
- E. 1 pieces
- F. 2 pieces
- G. 2 pieces
- H. 2 pieces
- I. 8 pieces
- J. 1 pieces

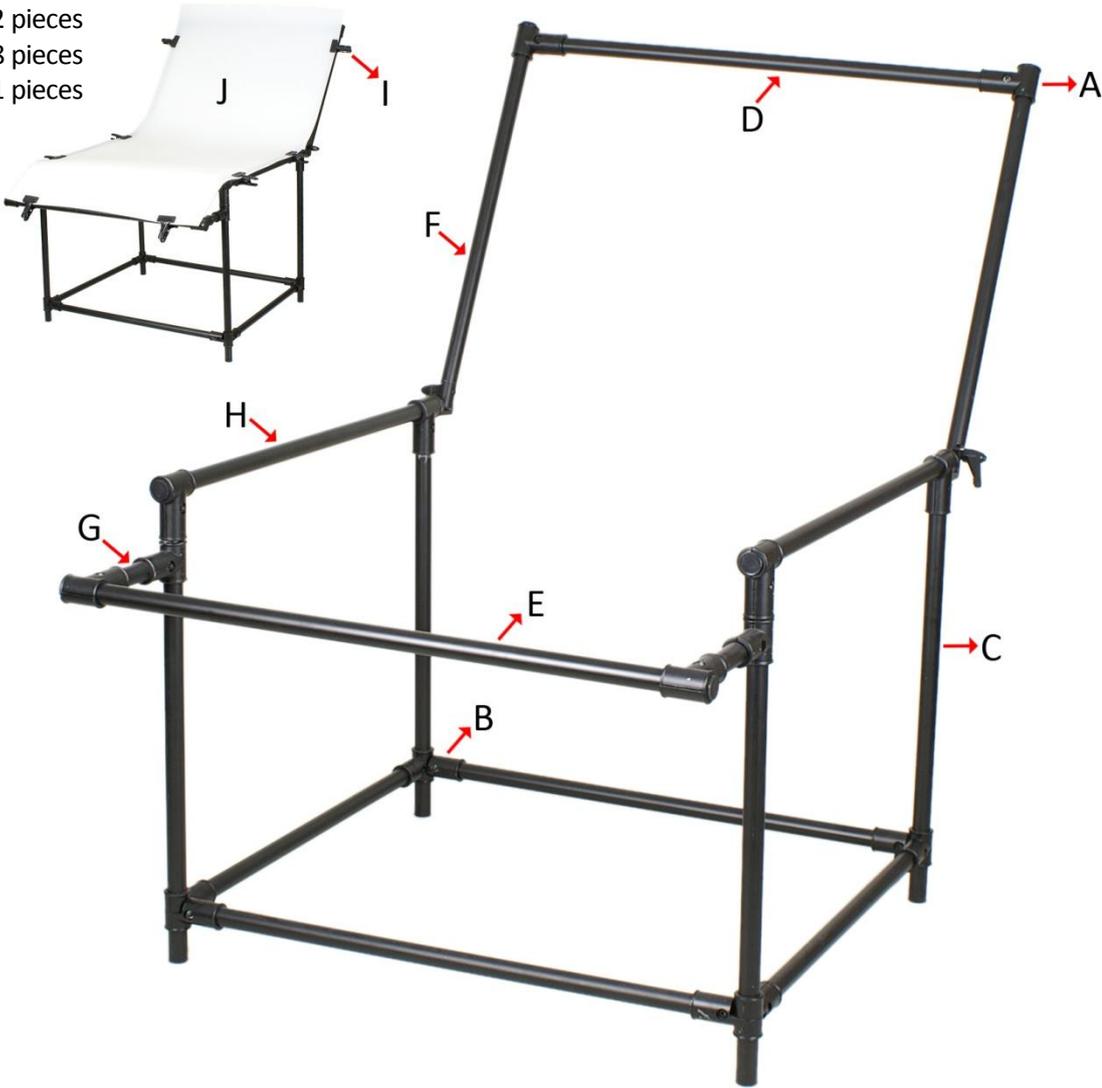


2. Assembly instructions

As to ensure an optimal handling, it is suggested to check firstly the number of rods and connection pieces, whether they are complete. Sort the different pieces to get an orderly working surface.


Step I

Start with two C and two D rods and put them on the end of the B pieces.

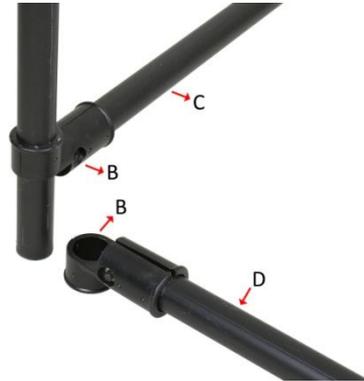

Step II


Afterwards, plug one C rod vertically through the two B pieces, so that they fit into each other in an L form. You will get a figure as shown besides.

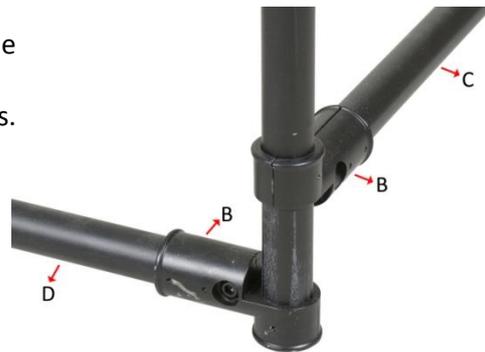

Step III

The front vertical C rod includes an A connection piece on its upper end.

Copy the figure mirror-inverted.

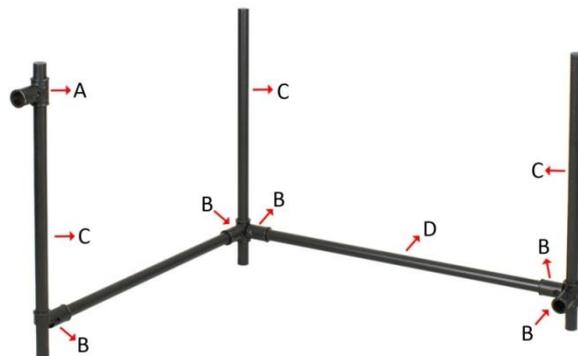


Your Shooting Table should look as follows.



Step IV


Put all shown A pieces on the vertical C rods. Afterwards, you can push the H rods on the right and left side with the mount from the back through the mounted A pieces up to the A piece on the opposite.

Your assembly should now have the same look as the figure.

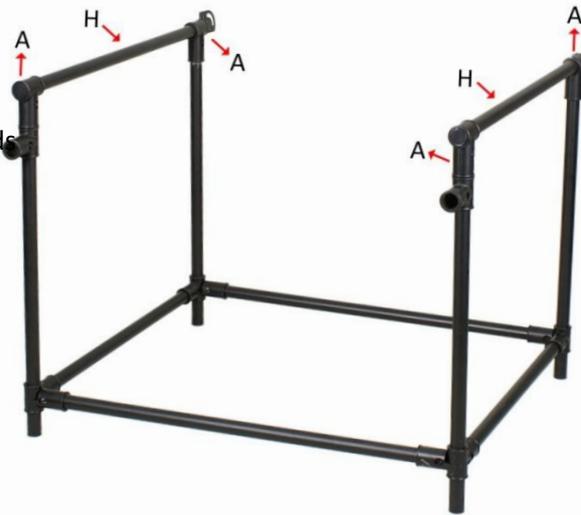


Step V

Mount the two G rods on the front A piece as shown in the picture.

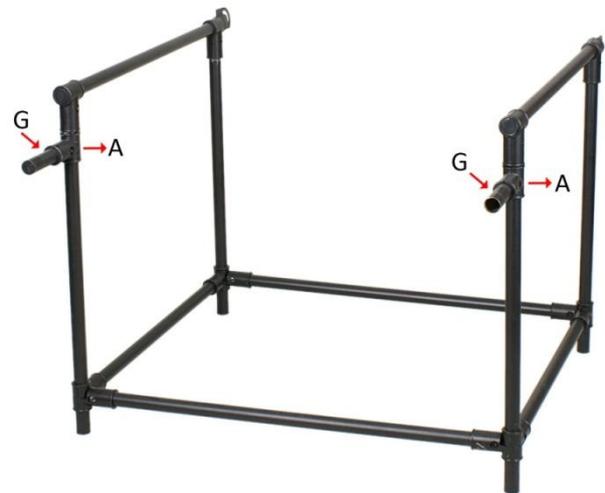

Step VI

The one E rod should be equipped with two A pieces on both ends. Now you can connect the rod with the G rods from the last step.

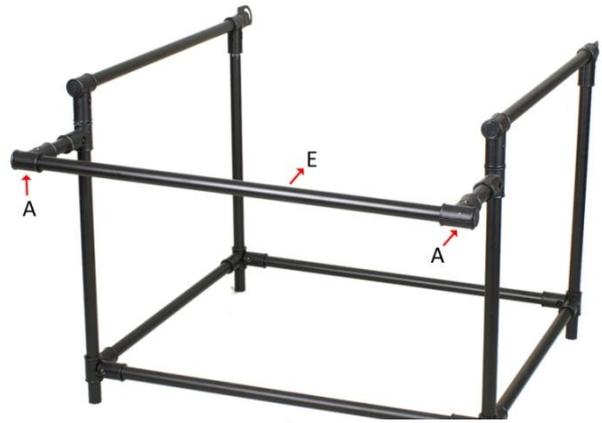

Step VII

The two F rods will be fixed through two screw handles as shown in the right figure.



Step VIII

Mount two A pieces on the last D rod and put it on the F rod from **Step VII**. The body of the Shooting Table is finished.



Step IX

Finally, mount the J plate with all I clamps. It would be the best to follow the position of the clamps as shown in the figure. The plate will have a good stability then.



3. Technical specifications

Please take a look on the following figure to get the single sizes of the Shooting Table.

